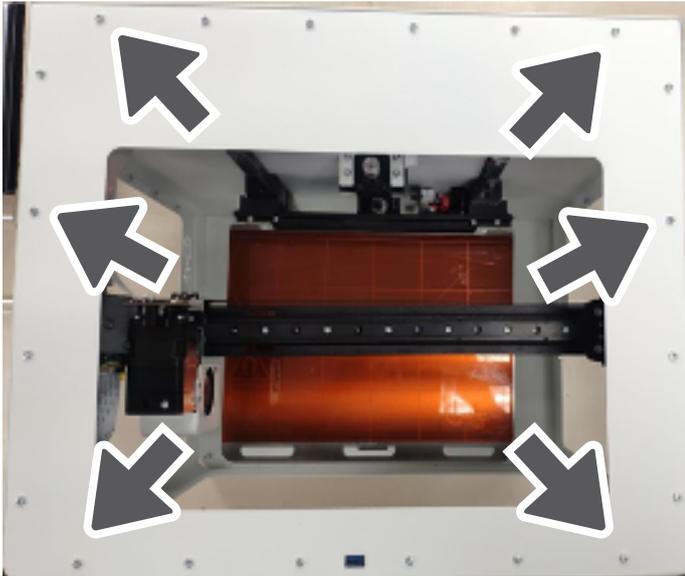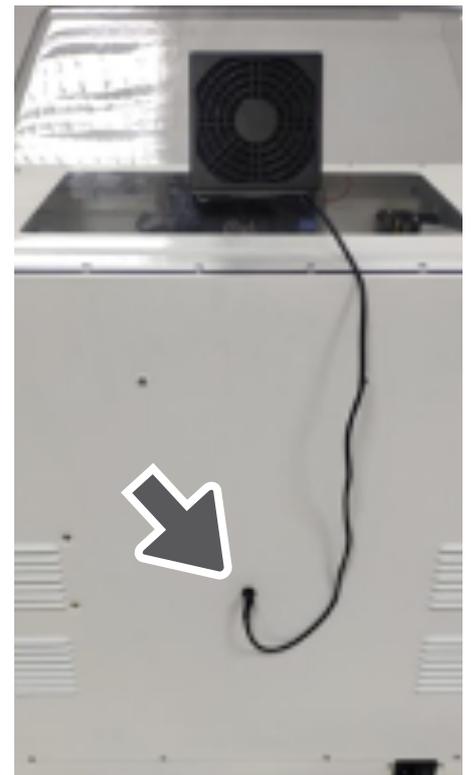# CraftBot
FLOWGENERATION

DOME ASSEMBLY

Please unplug the printer before assembling the dome!

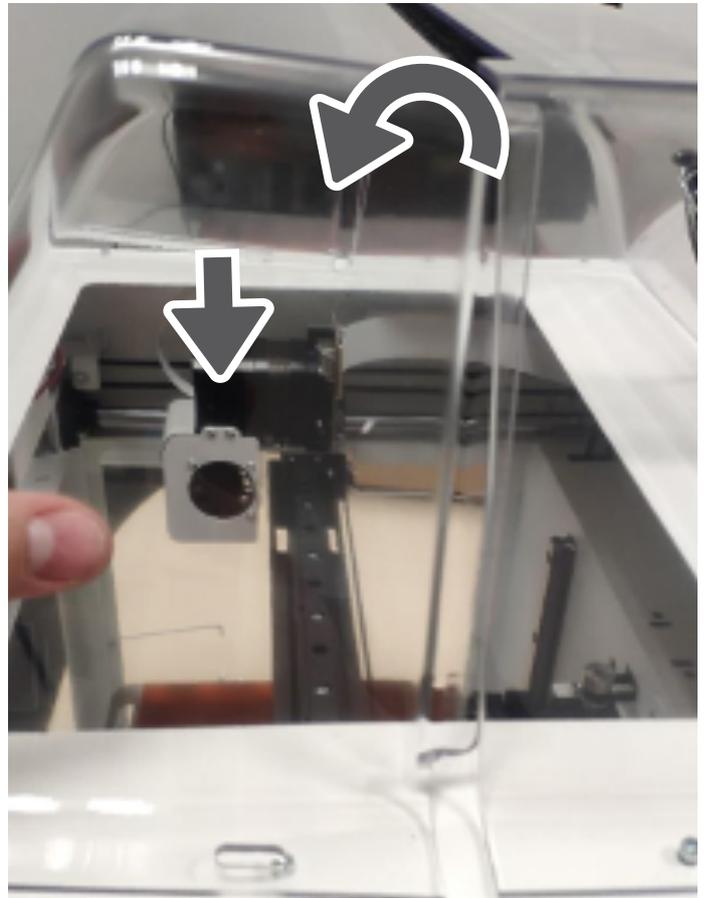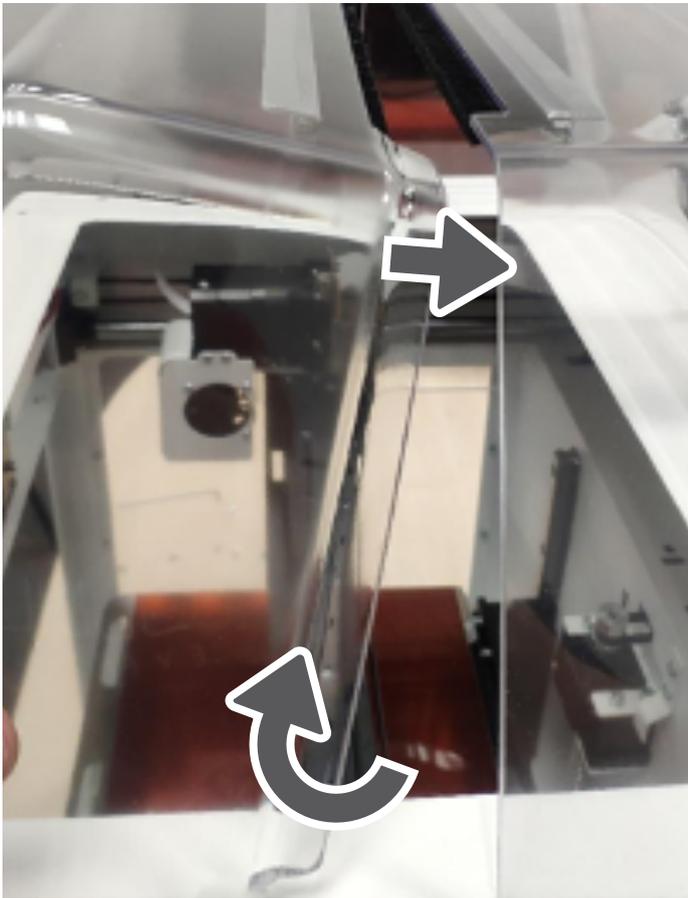To complete this process you will need: **2,5 Hex wrench**

1. Remove the screws marked with an arrow on the top cover of the printer.

2. Unscrew the back of the dome using the longer screws (Screws are included with the dome). Then connect the dome fan on the back plate of the printer.

3. Fix the other half of the dome. Tilt the part as shown (down) and press it to the other dome part.

(If you would like to fix the whole dome, than secure the front of the dome with two screws.)